



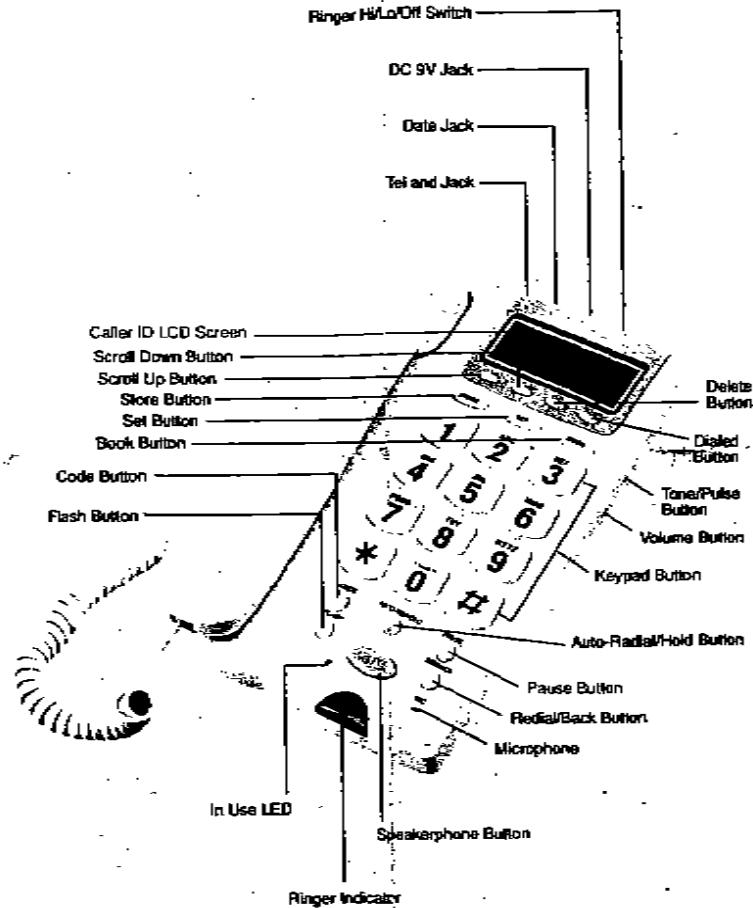

MODEL: TID-855

## LOCATION OF CONTROL

# OWNER'S MANUAL AND OPERATING INSTRUCTIONS

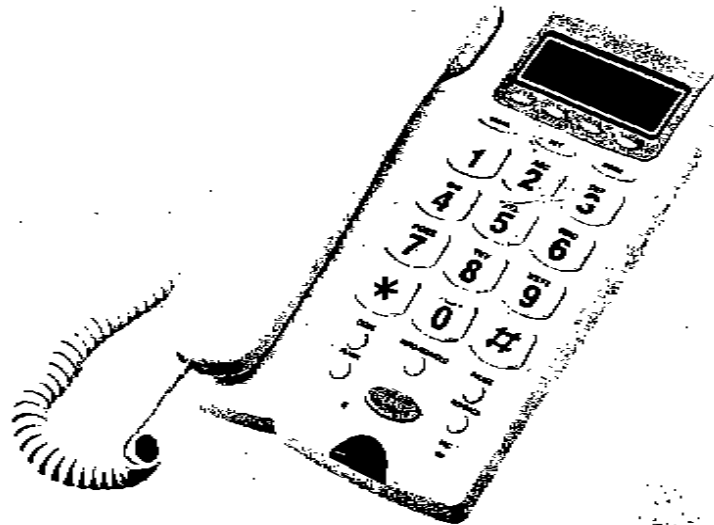

### Features:

1. Caller ID Speaker Phone
2. English/French/Spanish selectable
3. Maximum 90 Incoming Call Memories including Name and Number
4. Built In Phone Book with 45 Memories
5. Enable to review last 16 dial out records
6. LCD contrast Adjustable (5 Level)
7. 9 Ringer Melody Selectable
8. Display Real time, date and year
9. Baby Call function for emergency one touch dial
10. Music Hold
11. Data Port
12. Digital Lock

## INSTALLATION

1. Insert 3 pcs AAA batteries (Not included)
2. Contact the phone with the telephone line
3. Press [SET] key to enter the setup mode, USE [UP], [DOWN] key to select manual, use [SET] key to enter manual and [DEL] key to exit.

### SELECT LANGUAGE

Press [SET] to enter, use [UP], [DOWN] to select desire language then press [SET] key to confirm

### SET AREA CODE

Press [SET] to enter, use [UP], [DOWN] to select number then press [SET] key to confirm and enter the next digit.

### LONG DISTANCE ACCESS

Press [SET] to enter, use [UP], [DOWN] to select number then press [SET] key to confirm and enter the next digit.

### DATE/TIME

Press [SET] to enter, use [UP], [DOWN] to select the year, then press [SET] key to confirm and enter time and date by using the same method.

### LCD CONTRAST ADJUST

Press [SET] to enter, use [UP], [DOWN] to select desire contrast level and press [SET] key to confirm

### BABY CALL

Press [SET] key to enter, use [UP], [DOWN] to turn the baby function on/off, when you turn the function on, enter the emergency call number by dial keypad.

### RINGING MELODY

Press [SET] to enter, use [UP], [DOWN] to select desire ringing melody and press [SET] key to confirm.

### PHONE BOOK INPUT

- Press [SET] to enter,
- First enter Number by using the dial keypad, press [SET] key to confirm
  - Then enter Name by pressing the key which corresponds to the desired letter several times until the wanted letter appears
  - Wait 2 seconds then enter the next letter
  - Press [SET] key to complete.

### PHONE BOOK EDIT

- Press [SET] to enter, enter the first letter of the record's Name by pressing the key which corresponds to the desired letter several times until the wanted letter appears
- Use [UP], [DOWN] key to search the wanted record,
- After the wanted record appears, use [DEL] key to erase the old Phone Number and re-enter the correct one,
- Press [SET] to confirm changes and the cursor will move to the Name position,
- Use [UP], [DOWN] key to move the cursor, use [DEL] key to erase the letter and enter

new letter by pressing the key which corresponds to the desired letter several times until the wanted letter appears

PLEASE NOTE THAT KEY [0] IS USE AS A BLANK SPACE DURING THE NAME ENTER.

## OPERATION

### 1. MAKING A CALL

- You can lift the handset or press [SPEAKER] key to the dial tone and dial the desire number or
- You can enter the desire number first and use the [DEL] key to correct the number then press [SPEAKER] / [RD/BACK] to dial the number.

### 2. REVIEW INCOMING CALLS AND DIAL BACK

Use [UP], [DOWN] key to review the incoming call records and press [RD/BACK] key to dial back the number.

### 3. SAVE A INCOMING CALL INTO PHONE BOOK

Use [UP], [DOWN] key to search the incoming call record. Press [STORE], then press [BOOK] key to save the record into PHONE BOOK.

### 4. DELETE INCOMING CALLS

- Use [UP], [DOWN] key to search the incoming call records,
- Press [DEL] key to erase the single record
- By keep pressing [DEL] key more than 4 seconds in main menu, the entire incoming calls record will be deleted.

### 5. REVIEW DIALED CALLS

Use [DIALED] key to review the last dial out record and press [DIALED] continually for total 16 records review. Use [DEL] key to erase a dialed call record.

### 6. PHONE BOOK REVIEW AND DIAL OUT

- Press [BOOK] key to enter the phone book, you can use [UP], [DOWN] key to review the whole records or
- enter the first letter of the record by pressing the key which corresponds and then press the same key continually to view the whole records
- Press [RD/BACK] to dial out the number after the desire record is located.

### 7. AUTO REDIAL

When the dialed number is busy, press [AUTO-RD] to activate auto-redial function. The phone will repeat dialing back the last dial number 5 times. After the line get through, press [SPEAKER] key or lift the handset for conversation.

### 8. MUSIC HOLD

Press [HOLD] key to starts the music hold and if lift the handset again music hold will stop and starts conversation again or press [HOLD] or [SPEAKER] key again to stop music hold and enter speaker phone mode.

### 9. BABY CALL FUNCTION

When you activate the baby call function (Please view the installation part on how to activate the function), by pressing any key on the phone (except [SET] key), the preset number will dial out under speakerphone mode.

## 10. DIGITAL LOCK

Activate Lock Function.

1. Press [CODE] key to enter lock manual, "INPUT PIN CODE" will appear on LCD,
2. Enter "8888" (preset pin code) and press [CODE] again, "UPDATE DATE CODELOCK" will appear on the LCD,
3. Enter desire digits you would like to lock up and use "#" to separate, for example "001" and "1", enter "001#1"
4. Press [CODE] to confirm and complete  
\*If you like to lock up all digits, enter "#\*\*\*", then press [CODE] to confirm

Deactivate Lock Function

1. Repeat Step one above
2. Repeat Step two above
3. Use [DEL] key to erase the locked digits
4. Press [CODE] to confirm


Modify Pin Code

1. Press [CODE] key, then enter factory preset pin code [8888] and press [CODE] key again, "UPDATE CODELOCK" will appear on the LCD,
2. Press [UP] key to enter the modify mode, "MODIFY PIN CODE" will appear on the LCD,
3. Enter desire personal pin code (must be 4 digits) and press [CODE] key to confirm

\* If you forget your pin code, please remove the batteries and disconnect the unit from telephone line for three hours. The pin code will reset back to factory mode "8888" and all other information such as phone book and incoming calls details will be erased.

## IMPORTANT NOTES:

To operate this unit, you must have "CALLER ID SERVICE" & "CALL WAITING SERVICE" set-up with your local telephone company. Some functions such as "CALLER NAME INDICATION" and "MESSAGE WAITING INDICATION" will only operate if such services are included in the user's Caller I.D. program with the local telephone company.

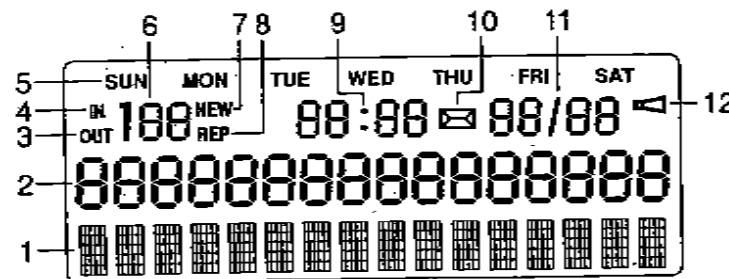

- |                    |                  |
|--------------------|------------------|
| 1. Name            | 7. New Calls     |
| 2. Number          | 8. Repeat Calls  |
| 3. Dial Out Number | 9. Clock         |
| 4. Recieve Calls   | 10. Message      |
| 5. Week            | 11. Date         |
| 6. Number of Calls | 12. Speakerphone |

## IMPORTANT SAFETY INSTRUCTIONS

When you use your telephone, follow these safety precautions to reduce the risk of fire, electric shock, and injury:

- Read and understand all instructions. Follow all warnings and instructions marked on the phone.
- Unplug the phone from the wall jack before cleaning with a damp cloth.
- Do not use liquid or aerosol cleaners. Do not use this phone near water for example, near a bath tub, sink, or near a pool.
- Do not let anything rest on the phone or power cord. Do not place this phone where a person can walk on Or abuse the cord.
- To reduce the risk of electric shock, do not push objects through the phone's slots or disassemble the phone. Pushing objects in the phone or opening or removing covers might expose you to dangerous voltages or other risk. Take it to a serviceperson when service or repair is required. Incorrect reassembly can cause electric shock when you use the phone.
- Do not place the phone on a bed, rug, any similar surface, or near a heater. The phone has slots and openings for ventilation that must not be blocked or covered.
- Do not place this phone on an unstable cart, stand, or table. The phone might fall, and be seriously damaged.
- Unplug this phone from the phone line jack and refer servicing to service personnel under the following conditions:
  - a. If liquid spills into the phone.
  - b. if the phone is exposed to rain or water.
  - c. If the phone fails to operate normally
  - d. If the phone is dropped or the cabinet is damaged.
  - e. If the phone exhibits a distinct change in performance.
- Adjust only controls covered by the operating instructions. Improper adjustment of other controls can cause damage and often requires extensive work by a technician to restore the product to normal operation. Avoid using the phone during electrical storms. There is a risk of electric shock from lightning.
- Do not use the phone to report a gas leak in the vicinity of the leak.
- Follow all safety rules and use caution when installing or modifying telephone lines. For example:
  - a. Do not install telephone wiring during a lightning storm.
  - b. Only install telephone jacks in dry locations unless the jack is specifically designed for wet locations.
  - c. Avoid touching uninsulated telephone wires or terminals unless the telephone line is disconnected at the network interface.

SAVE THESE INSTRUCTIONS.

AC ADAPTOR FOR DC JACK  
SPECIFICATION: OUTPUT DC 5V 100MA  
POLARITY OF PLUG + -

