





TID 877

LOCATION OF CONTROLS

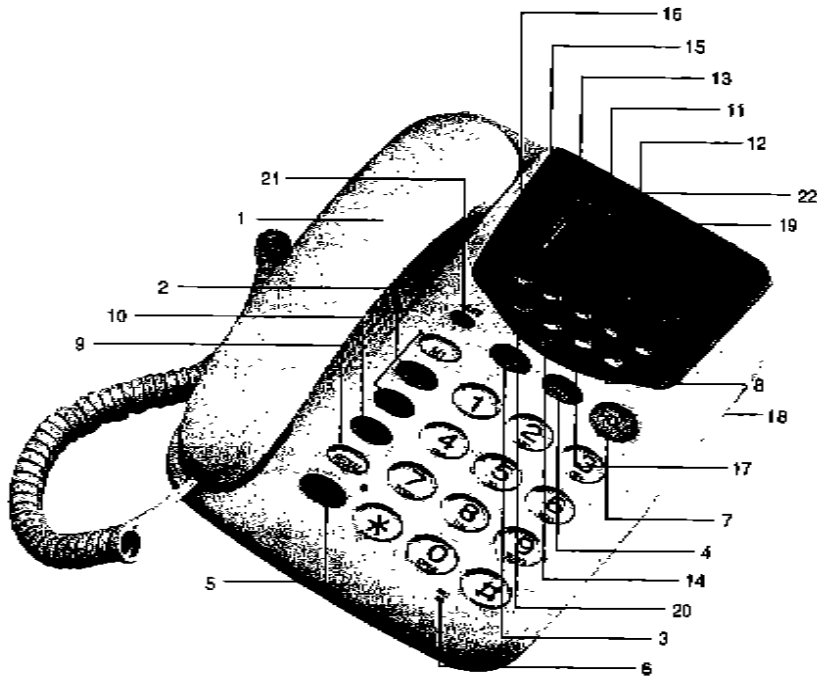

- | | |
|--|--------------------------|
| 1. Handset | 12. Mode Button |
| 2. One Touch Memory Button
(M1, M2, M3) | 13. Del/Sto Button |
| 3. Auto Button | 14. Copy Button |
| 4. Store Button | 15. Down Button |
| 5. SP- Phone Button | 16. Up Button |
| 6. Mic | 17. P-T Button |
| 7. Hold Button | 18. Tone/Pulse Switch |
| 8. Pause Button | 19. Ringer On/Off Switch |
| 9. Redial Button | 20. Filter Button |
| 10. Flash Button | 21. Mute Button |
| 11. Dial Button | 22. DC 9V Jack |

OWNER'S MANUAL AND OPERATING INSTRUCTIONS

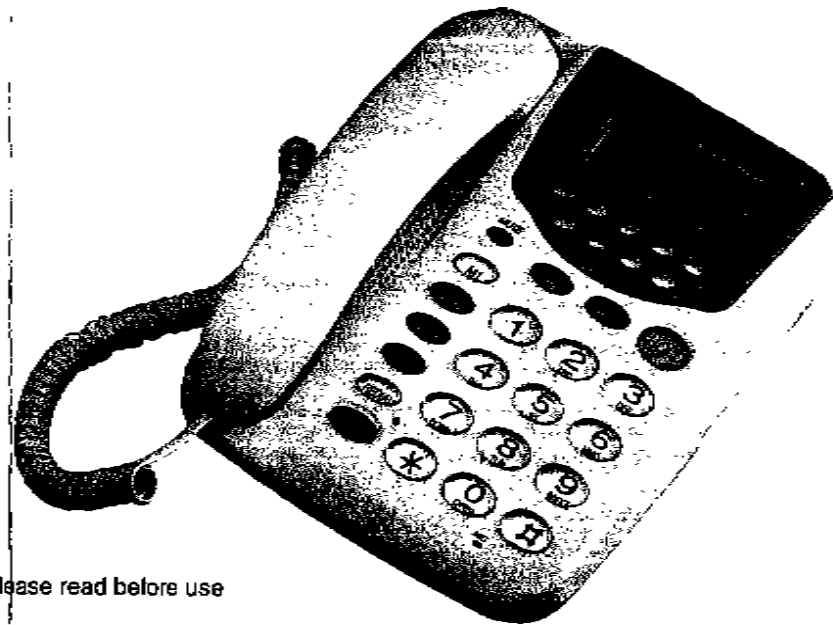

Please read before use

FEATURES:

- 99 MESSAGE MEMORIES
- 3-LINE INDICATION
- ENGLISH/SPANISH/FRENCH SELECTABLE
- NAME AND NUMBER DISPLAY
- REDIAL THE DISPLAYED NUMBER
- DATE AND TIME STAMP
- ENLARGED LCD DISPLAY
- REAL TIME CLOCK
- REVIEW MESSAGE
- MESSAGE DELETION
- LOW BATTERY INDICATOR
- POWER: AAA BATTERY x 4 OR DC ADAPTOR (NOT INCLUDED)
- DESK/WALL MOUNTABLE

CAUTION

This product is an electrical device and can be hazardous if immersed in water. To avoid the possibility of electrical shock, do not use it while in the bathtub or shower or when you are wet. If you accidentally drop it into water, first unplug its cord (or cords) from the modular jack, and remove the equipment from the water.

OPERATION INSTRUCTION

TONE/PULSE SELECTOR

Select the type of dialing that you desire or that your telephone system requires.

TONE ... The unit will operate using tone dialing.

PULSE ... The unit will dial using rotary dial type pulses.

RINGER ON/OFF

Select the desired function of the tone ringer.

OFF ... The tone ringer does not sound, for undisturbed privacy.

ON ... Normal setting rings on incoming calls.

LAST NUMBER REDIALING

The last number you called can be redialed automatically. This is useful especially if lines is busy.

1. Get a new dial tone and press REDIAL button.

2. To get a new dial tone press the HOOK SWITCH or hang up the phone for 2 seconds. Then press REDIAL. This phone will remember the last number dialed even overnight.

(If you do not want anyone to know which number you dialed last, pick up the phone and press any number)

FLASH BUTTON

When in an office equipped with PABX, your unit makes it easy to transfer calls.

Ask calling party to wait.

Press and release FLASH button.

Dial number to which call is intended.

When the party answers, announce the call and hang up.

If you receive a busy or no answer.

Press and release FLASH button to re-connect to calling party.

HOLD BUTTON

To put your party on hold position, press 'HOLD' button and replace handset on cradle.

To release pick up any handset on the same line.

PAUSE BUTTON

In some cases, such as PABX or long distance service, pauses should be inserted in the dialing sequence. The unit provides stackable pause function (3.6 sec/pause) which facilitates flexible applications.

MUTE BUTTON

To temporarily prevent the other party (caller) from hearing your conversation press MUTE, and keep it pressed down. When you release the button conversation can be heard again.

TO STORE 3 ONE-TOUCH(M1/M2/M3) MEMORIES

1. Get the dial tone

2. Press STORE button

3. Enter the number you want to store

4. Press STORE button once again

5. Press the desire one-touch button (M1/M2/M3)

TO STORE 10 TWO-TOUCH SPEED DIAL MEMORIES

1. Get the dial tone

2. Press STORE button

3. Enter the number you want to store

4. Press STORE button once again

5. Press the desire location from digit 1-0

TO DIAL A NUMBER FROM ONE-TOUCH MEMORY

1. Get the dial tone

2. Press one the one-touch button (M1/M2/M3)

TO DIAL A NUMBER FROM TWO-TOUCH SPEED DIAL MEMORY

1. Get the dial tone

2. Press 'AUTO' button first, then enter the desire location from 1-0

CALLER ID SECTION:

99 MESSAGE MEMORIES

3-LINE INDICATION

ENGLISH/SPANISH/FRENCH SELECTABLE

NAME AND NUMBER DISPLAY

REDIAL THE DISPLAYED NUMBER

DATE AND TIME STAMP

ENLARGED LCD DISPLAY

REAL TIME CLOCK

REVIEW MESSAGE

MESSAGE DELETION

LED MESSAGE WAITING INDICATOR

LOW BATTERY INDICATOR

POWER: 9V BATTERY x 1 OR DC ADAPTOR

You must finish the pre-setting before using the unit. Install the 9v battery and press [UP], [DOWN] and [DEL/STO] together for 10 seconds to initialize the pre-setting program:

(a) Select language

1. "ENG,ESP,FRA," appear on the LCD

2. Press "UP" or "DOWN" to select desire language mode.

3. Press "DEL/STO" once to decide.

(b) Enter your area code

1. Press [UP] or [DOWN] button to set the first digit of area code. The number will increase in sequence.

2. Press [DEL/STO] button to decide.

3. Repeat step 1 and 2 to set the rest of digits.

(c) Enter time/date

1. Press [UP] or [DOWN] to select,

2. Press [DEL/STO] to decide.

Caller ID Status indications

'UNAVAILABLE'

The call is made through a telephone company which does not offer Caller ID service.

'PRIVATE'

The call was blocked. For privacy reason, many states allow callers the option to prevent his or her telephone data from being displayed on the other party's Caller ID display. If you receive a call which was blocked in this way, "PRIVATE" will be shown on the display.

'LINE ERROR'

An error data was received. When ERROR is shown on the display, the telephone number may include some error digits.

Viewing the caller ID list

This unit can store up to 99 calls received.

Press the [UP] or [DOWN] button. The display shows the previous (older) data of call. When the oldest data is viewed, "END OF RCV" will appear on the display. If the received number contains your own area code, the area code will not appear on the screen.

Erasing data from the caller ID list

This unit maintains the data of last 99 calls in memory. If there is a new call after those 99 calls, the oldest data will be automatically erased and the new call will be stored.

To erase one stored number at a time

1. Press [UP] or [DOWN] button to display the data.

2. Press [DEL/STO] button for twice continuously, the displayed data will be erased.

If you press [DEL/STO] for more than 6 seconds, the entire list will be deleted.

Calling back a number from the caller ID list

1. Press [UP] or [DOWN] button to display the data.

2. Pick up your telephone or press speakerphone button.

3. Press [DIAL] button to dial the number displayed.

Voice Message

An envelope icon with 'MSG' string is to indicate a voice mail was received

Filter function

Filter all the phones but VIP. The 'FILTER' icon is turned on while filter function being activated.

1. Turn the RINGER switch to off position

2. Press [FILTER] button once, you must enter the starting and stopping time. Within this time interval, the unit only shows the incoming calls without ringing (except VIP message).

3. To deactivate the filter function, press [FILTER] button again.

Store function

1. Press [UP] or [DOWN] button to display the data.

2. Press [COPY] once, the screen will display 'NORM VIP REJ ESC'.

3. Press [UP] or [DOWN] button to select the desire group and press [DEL/STO] to decide

Note: "NORM" means the incoming call is normal which comes with 2 beep sound, "VIP" refers to very important call, even under "FILTER" status, the call still comes with 4 beeps sound; "REJ" refers to unwelcome call. The unit only show the calling number without any beep sound.