



TID-893


OWNER'S MANUAL AND OPERATING INSTRUCTIONS



FEATURES

- Caller ID Speaker Phone
- English / French / Spanish Selectable
- Maximum 90 Incoming Call Memories
- Built in Phone Book With 45 Memories
- Enable to Review 16 Last Outgoing Number
- LCD Contrast Adjustable (5 Level)
- 8 Ringer Melodies Selectable
- Display Real Time, Date and Week
- Baby Call Function for Emergence One Touch Dial
- Music Hold
- Digital Lock
- Wall or Desk Use

LOCATION OF CONTROL

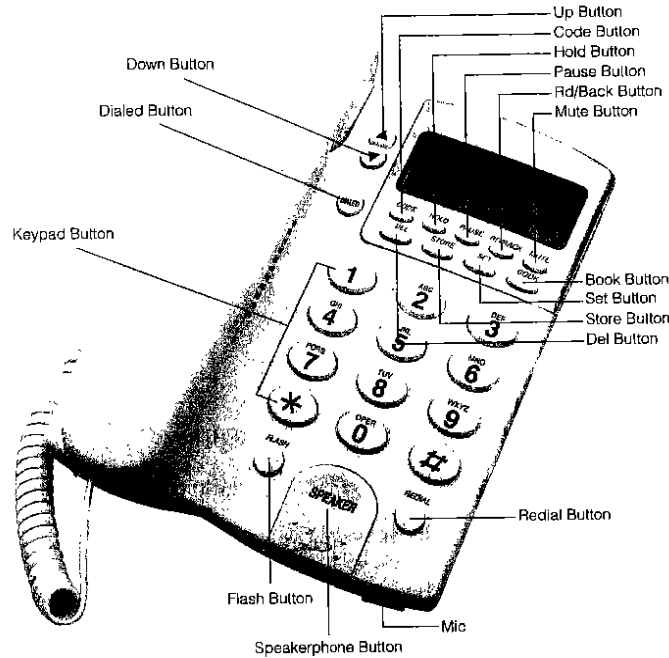


INSTALLATION

1. Plug one end of coiled cord to the jack of handset and the other end to the jack of the base set
2. Plug one end of flat cord to line jack of the phone and the other end to the wall jack
3. Open the battery compartment cover, install 3 PCs AAA batteries (not included) or
4. Connect the 9V adapter with center point negative to the DC jack of the unit (adapter not included)

WALL MOUNTING

1. Insert the wall mount bracket at the bottom on the base of phone
2. Place the phone over the wall plate on your wall. Be sure both studs fit into the slots on the bottom of the base
3. Slide base down firmly onto the wall plate
4. To prevent the handset from falling, lift out, turn and replace tab below the hook switch on the base set

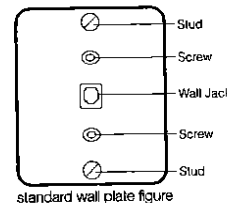

SETTING

NOTE:

1. Under on-hook state or off-hook state, press [SET] key to enter the setting mode, LCD will display "VIEW MENU ↑ ↓"
2. Press [▲] or [▼] to select the preferred sub-menu and press [SET] key to enter
3. After finish the setting, press [SET] key to confirm and enter the next sub-menu automatically
4. Press [DEL] to exit
5. Press [0] key to enter a space when inputting name into phonebook

SETTING LANGUAGE

- Press [SET] key to enter, press [▲] key once, "SELECT LANGUAGE" will display on LCD, press [SET] key again
- Use [▲] or [▼] to select the desired language
- When the desired language appears on LCD, press [SET] key to confirm

SETTING AREA CODE

- Press [SET] key to enter, press [▲] key twice, when "SET AREA CODE" display on LCD, press [SET] key again
- Use [▲] or [▼] to set the first digit
- Press [SET] key to confirm and enter the next digit
- Repeat this process for the remaining 3 digits
- Press [SET] key to confirm

SETTING THE DISTANCE ACCESS

- Press [SET] key to enter, press [▲] key three times, when "LONG DIST ACCESS" display on LCD, press [SET] key again
- Use [▲] or [▼] to set the first digit
- Press [SET] key to confirm and repeat this process for the remaining 3 digits
- Press [SET] key to confirm

SETTING DATE AND TIME

- Press [SET] key to enter, press [▲] key four times, when "DATE / TIME" display on LCD, press [SET] key again
- The year will blink, press [▲] or [▼] to select the right number
- Press [SET] key to confirm and use the same method to set hour, minute, month, date sequentially
- Press [SET] key to confirm

SETTING LCD CONTRAST

- Press [SET] key to enter, press [▲] key five times, when "CONTRAST ADJUST" display on LCD, press [SET] key again
- Use [▲] or [▼] to select the desired brightness (there are 5 levels)
- Press [SET] key to confirm

SETTING BABY CALL

- Press [SET] key to enter, press [▲] key six times, when "BABY CALL" display on LCD, press [SET] key again
- Use [▲] or [▼] to turn the function on / off
- If you set the function on, press [SET] key once, then enter the emergence call number and use [SET] key to confirm
- If you set the function off, press [SET] key to exit

SETTING RINGING MELODY

- Press [SET] key to enter, press [▲] key seven times, when "RING MELODY" display on LCD, press [SET] key again
- Use [▲] or [▼] to select the desired melody (there are 8 melodies)
- Press [SET] key to confirm

PHONEBOOK INPUT

- Press [SET] key to enter, press [▲] key eight times, when "PHONEBOOK INPUT" display on LCD, press [SET] key again
- Input the telephone number first (up to 16 digits), press [SET] key to confirm.
- And press the [DEL] key to go back and correct a number before pressing the [SET] key
- Then enter name by pressing the key which corresponding to the desired letter several times until the wanted letter appears (For example: to enter a "R", just press the [7] key three times)
- Wait 2 seconds then enter the next letter, and use the same method to set the remaining letters
- Press [SET] key to confirm

PHONEBOOK EDIT

- Press [SET] key to enter, press [▲] key nine times, when "PHONEBOOK EDIT" display on LCD, press [SET] key again
- Enter the first letter of the name by pressing the key which corresponding to the desired letter several times until the wanted letter appears
- The LCD will show the closest match, use [▲] or [▼] to search the wanted record
- After the wanted record appears, use [DEL] to erase the old number and enter the new one
- Press [SET] key to confirm changes and the cursor will move to the name position, use [▲] or [▼] to move the cursor, use [DEL] to erase the letter and enter the new one
- Press [SET] key to confirm

OPERATION

MAKING A CALL

- Lift the handset or press [SPEAKER] key to get the dial tone, input the desired telephone number
- Or under on-hook state, input the desired telephone number first, use [DEL] key to correct the number, and press [SPEAKER] or [REDIAL] key to dial out the number

LAST NUMBER REDIAL

- Lift the handset or press [SPEAKER] key
- Press [REDIAL] key to dial out the last outgoing number

REVIEW INCOMING CALLS AND DIAL BACK

- When real time clock on display, use [▲] or [▼] to review the incoming call records
- Press [RD / BACK] key to dial out the number
- Press [RD / BACK] key twice to dial out the number with long distance access prefix

SAVE AN INCOMING CALL INTO PHONEBOOK

- Use [▲] or [▼] to search the incoming call record
- Press [STORE] key, then press [BOOK] key to save the record into phonebook

DELETE INCOMING CALLS

- Use [▲] or [▼] to search the incoming call record
- Press [DEL] key to delete the single record
- Press [DEL] key more than 4 seconds, the entire incoming call records will be deleted

REVIEW DIALED CALLS

- Lift the handset or press [SPEAKER] key, use [DIALED] key to review the last outgoing numbers and press [DIALED] key continually for total 16 records review.
- Press [DEL] key to delete the displaying record
- Press [RD / BACK] key to dial out the displaying number

PHONEBOOK REVIEW AND DIAL OUT

- Press [BOOK] key to enter the phonebook, use [▲] or [▼] to review the whole records
- Or enter the first letter of the name in the record, use [▲] or [▼] to select the desired record
- When the desired record on display, press [RD / BACK] key to dial out the number and press [RD / BACK] key twice to dial out the number with long distance access prefix

MUSIC HOLD FUNCTION

- During conversation, press [HOLD] key
- Then put back the handset or press [SPEAKER] key if speakerphone activated
- Lift the handset again or press [SPEAKER] key to go to talk with the caller
- (This function allow you to talk with another person and the conversation will not be heard by the caller)

BABY CALL FUNCTION

- When you activate the baby call function, press any key (except [SET] key) to dial out the preset number under speakerphone mode
- If you want to dial out another number, please first deactivate this function

MUTE FUNCTION

- Press and hold the [MUTE] button to temporarily prevent the caller from hearing your conversation
- Release the button to restore normal sound

FLASH FUNCTION

Press the [FLASH] key once, telephone will enter on-hook state for 600MS, then re-connect the line.

PAUSE FUNCTION

In some cases, such as PABX or long distance service, pauses should be inserted in the dialing sequence. The unit provides stackable pause function (3.6sec/pause) by pressing [PAUSE] key.

DIGITAL LOCK

1. Activate lock function

- Under on-hook state, press [CODE] key, "INPUT PIN CODE" will on display
- Enter the pin code (original is "8888")
- Press [CODE] key again, "UPDATE LOCK CODE" will on display
- Enter desired digits you would like to lock up and use [#] to separate (For example: "139" and "00", just enter "139#00")

- Press [CODE] key to confirm
- ### 2. Deactivate lock function
- Repeat step one, step two, step three above
 - Press [DEL] key repeatedly to delete the locked digits
 - Press [CODE] key to confirm

3. Modify pin code

- Repeat step one, step two, step three above
- Press [▲] or [▼], "MODIFY PIN CODE" will on display
- Enter the new pin code (must be 4 digits)
- Press [CODE] key to confirm

Note: If you forget the new pin code, please remove the batteries, AC adapter and telephone line cord for two hours. Then the pin code will be original code "8888", but you need to reset a information, such as phonebook and Caller ID.

SAFETY INSTRUCTIONS

- This telephone is an electrical device and can be hazardous if immersed in water. If you accidentally drop it into water, first unplug it from wall jack, and remove it from water.
- Please keep the telephone dry and do not use it in moisture place. For example, near a bathtub, washbowl, kitchen sink, laundry tub and swimming pool. Do not use it in rain.
- Unplug the phone from the wall jack before cleaning with damp cloth; please do not use liquid or aerosol cleanser.
- Do not use the phone to report a gas leak in the gas vicinity. Please remove yourself immediately from the area and make the emergency phone call in a safe area.
- Handle the phone carefully. Do not drop it.
- Do not use or put the unit in extreme temperature.
- Keep the phone away from dust and dirt.
- Use the right power batteries indicated in the manual. Do not put batteries in a fire for such action can lead to an explosion.
- Do not modify or tamper with the telephone's internal components. Improper adjustment can cause damage and can be dangerous.