

CALLER ID SECTION

- ENTER TIME

YOU CAN ENTER THE TIME (24 HOUR MODE) BY KEY ENTRY.

e.g.01:30PM



1



1

DEF
3

DEF
3

OPER
0



- ENTER DATE

YOU CAN ENTER DATE BY KEY ENTRYING * 2#YYMMDD *.

(YY:YEAR, MM:MONTH, DD:DATE)

e.g. 2001 March 13, 2001



ABC
2



OPER
0

1

OPER
0

DEF
3

1

DEF
3



- ENTER AREA CODE

YOU CAN ENTER YOUR AREA CODE BY KEY ENTRYING

32 #N1....N2 . (N1....N2 : AREA CODE)

e.g. 925 FOR SAN FANSISCO



DEF
3

ABC
2



WXYZ
9

ABC
2

JKL
5



- REVIEW THE CALLER ID MESSAGE
APART FROM USING THE 'UP' AND 'DOWN' KEY TO SEARCH THROUGH PHONE NUMBERS STORED IN THE MEMORY, YOU CAN FIND SPECIFIC PHONE NUMBER BY ITS INCOMING CHARACTERISTIC.

 
(1) ACCORDING TO PHONE NUMBER

e.g. 6171917




(2) ACCORDING TO INCOMING TIME

e.g. JANUARY



e.g. TENTH JULY

 

- REVIEW THE OUT GOING CALL MEMORY



- DISPLAYED NUMBER DIALING



UP / **DOWN** TO DISPLAY THE DESIRED NUMBER,



REDIAL TO DIAL THE DISPLAYED NUMBER AUTOMATICALLY.

- DELETE THE CALLER ID MESSAGE



DEL TO DELETE THE DISPLAYED NUMBER

- INITIATE THE VIP FUNCTION



VIP SET TO SET THE DISPLAYED NUMBER IN **☑** MODE.



VIP CHECK TO REVIEW THE **☑** VIP LIST.

- VOICE REPORTING THE CALLER'S NUMBER FUNCTION
YOU CAN ACTIVATE A VOICE REPORTING FUNCTION BY



JKL
5



JKL
5



THE ABOVE KEY SEQUENCE SETS A REPORTING SELF REPEATING
5 TIMES. (MAX 9 TIMES)

YOU CAN DEACTIVATE THIS FUNCTION BY



JKL
5



- VOICE REPORTING DATE AND TIME




TO MAKE THE PHONE SPEAK OUT THE CURRENT TIME.

- VOICE REPORTING THE NEW CALL




TO MAKE THE PHONE SPEAK OUT THE NEW PHONE NO., DATE AND TIME AUTOMATICALLY.

- CHANGE THE PIN CODE FOR PHONE-LOCK FUNCTION
e.g. CHANGE THE CODE FROM PRESET VALUE 888 TO 151.

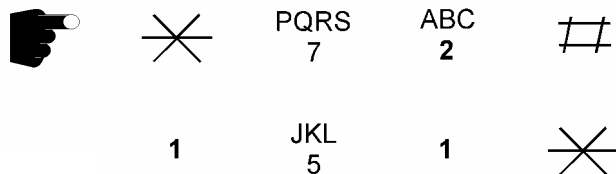


- LOCK THE PHONE / FREE THE PHONE WITH PIN CODE
e.g. LOCK THE PHONE WITH NEWLY SET CODE 151.

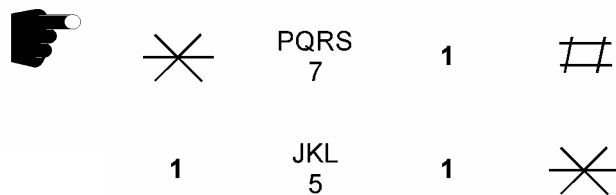


- ADJUST THE BRIGHTNESS OF LCD DISPLAY (9 LEVEL)

 WITH THE HANDSET LIFTED,




 - ACTIVIAATE THE 'DO NOT DISTURB' FUNCTION
Remarks: THIS FUNCTION ALLOWS RINGING OCCURS SOLELY WHEN A 'VIP' CALL COMES IN.



- SET VOICE PAGE NUMBER
WHEN SOMEONE CALLS YOUR TELEPHONE AND THERE IS NOBODY ANSWER, IT WILL INFORM THE CALLER THE NUMBER YOU HAVE SET.

e.g. SET THE VOICE PAGE NUMBER TO 6225622

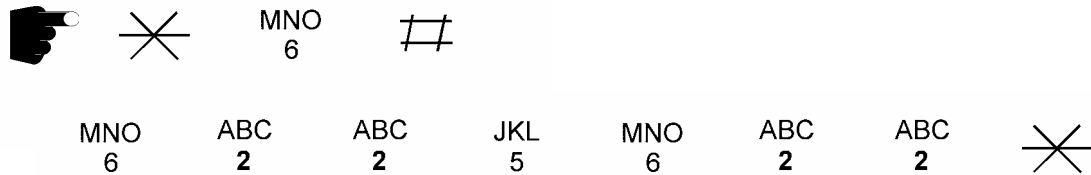

- SET PRE-RINGING LENGTH BEFORE AUTO VOICE PAGE BROADCAST
e.g. SET 5 RINGING TIMES



 
- TURN VOICE PAGE ON / OFF




- CHECK THE VOICE PAGE NUMBER



- CHECK CALLER'S MESSAGE WITH TELEPHONE CONTROL
 Remark: THIS FUNCTION ONLY WORKS WHEN 'VOICE PAGE' IS ON
 AND YOU HAVE SET THE RING TIMES.



 FOR ENTERING YOUR PIN CODE
 (ORIGINAL PIN CODE :888)



FOR MAKING THE PHONE REPORT ALL THE
 CALLER'S MESSAGE IN ORDER