 
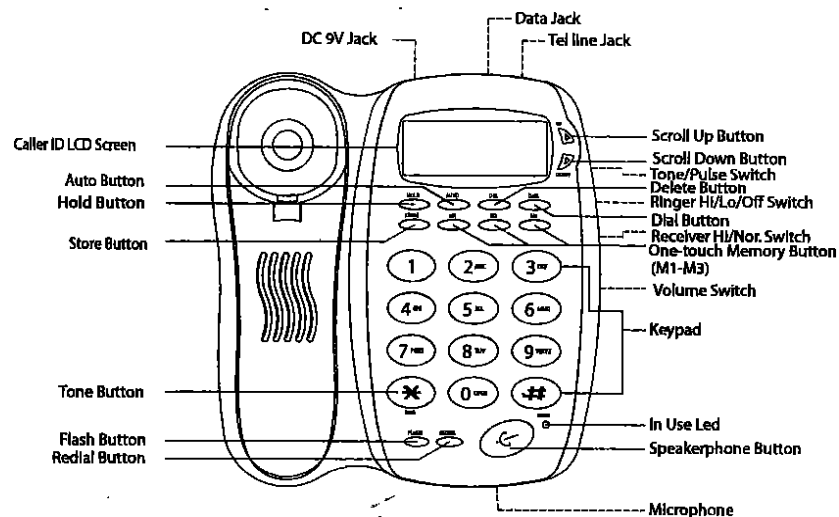 


SYLVANIA

STID991

USER'S MANUAL AND OPERATING INSTRUCTION

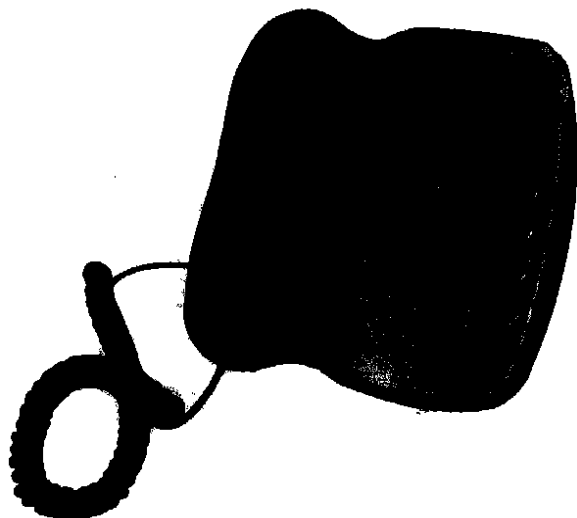

INSTALLATION

Install 3pcs AA 1.5V batteries (please note the correct polarity + and -, batteries not included). Plug one end of coiled cord to the jack of handset and the other end to the jack of the base set. Plug one end of flat cord to line jack of the phone and the other end to the wall jack

DESCRIPTION OF DISPLAYING

A. 3 line LCD displaying, upper line displays the basic information, middle line displays the number of in-coming call and bottom line displays the name of caller

- "NEW" appears when there are new incoming calls
- "CALL #" means the total amount of incoming calls
- "AM/PM XX:XX XX/XX" means Morning/Afternoon Hour:Minute Month/Day respectively

B. If a number was received more than once, the LCD will only display the time and date of the last call when review the incoming calls.

C. If the time and date of incoming call is different from the Telephone Company, the telephone will adjust the time and date automatically according to Telecom Provider when receiving calls.

D. If there is no operation or no incoming calls more than 30 seconds, LCD only displays time and date, total amount of received calls and amount of new incoming calls

E. This telephone can store up to 88 incoming calls. If there is a new call after the 88th call, the oldest one will be erased automatically and the new call will be stored.

SETTING UP

Press [▼] for two seconds to enter the setting menu including Set Language, LCD Contrast, Set Area Code, Set SSN and Set Time/Date

- Set Language**
 - The LCD will display "E F S"
 - Use [▲] to select the wanted language (E=English, F=French and S=Spanish)
 - Press [DEL] to confirm
- LCD Contrast**
 - After setting language, it will enter LCD contrast setting, the LCD will display 'LCD CONTRAST'
 - Use [▲] to adjust LCD contrast level. There are total six levels.
 - Press [DEL] to confirm
- Set Area Code**
 - After setting the LCD contrast, it will enter the area code setting, the LCD will display 'SET AREA CODE', press [▲] to select the first digit of area code
 - Press [▼] to skip to next digit
 - Use the same method to set the rest digits.
 - Press [DEL] to confirm
- Set Special Service Number (SSN)**
 - After setting area code, it will enter SSN setting. The LCD will display "SET SSN". Press [▲] to select the first digit of SSN
 - Press [▼] to skip to next digit
 - Use the same method to enter the rest digits.
 - Press [DEL] to confirm

FEATURES:

- Caller ID Speakerphone
- English / French / Spanish Selectable
- Up to 88 Message Memories
- Name and Number of Incoming Call Display
- New Incoming Call Indication
- Private Call, Out of Record and Message Display
- Last Outgoing Number Redial
- Real Time Clock
- 3 One-Touch Dialing Memories
- 10 Two-Touch Dialing Memories
- 6 Levels of LCD Contrast Adjustment
- Music On Hold Function
- Tone / Pulse Switchable
- Low Battery Indicator
- Ringer Volume Control (Hi/Lo/Off)
- Receiver Volume Control (Nor/Hi)
- Speakerphone Volume Control (Max to Min)

Set Long Distance Prefix

As with the Area Code, storing the dialing prefix for long distance calls (the LDS) may be necessary when Caller ID information, displayed on the LCD, is later used to make a phone call. To store the LDS, follow below instructions:

When "SET LDS" is displayed, press the "UP" key to select the single digit prefix used to begin long distance dialing. In some area, a "1" is used for the purpose (e.g. 1 (718) 533-7000). If no prefix is used, press the "UP" key, as required, until the hyphen (-) appears.

Press the "DEL" key to store the LDS prefix and proceed to SET SSN

- E. Date and Time**
- After setting SSN, it will enter the date and time setting, the LCD will display "SET TIME/DATE"
 - Press [▲] to set the year
 - Press [▼] to skip to next setting
 - Use the same method to set the present hour, minute, month and day respectively.
 - Press [DEL] to confirm.
- F. Tone/Pulse Selectable**
- Select the dialing mode that your telephone requires by sliding the [T-P] switch to 'T' position for tone dialing and to 'P' position for pulse dial.
- Note: Under the pulse dial state, press '* *' to change to tone dial.
- G. Ringer Hi/Lo/Off Selectable**
- Slide the [RINGER] switch to 'Hi' position or 'Lo' position to turn the ringer on. 'Hi' for high volume and 'Lo' for low volume
 - Slide the [RINGER] switch to 'Off' position to turn the ringer off. The ringer will not be activated by any incoming calls. Don't forget to turn the ringer 'ON' when you are ready to receive calls, otherwise, you will not hear the ringing sound.
- H. Receiver Volume Adjustment**
- Slide the [RECEIVER] switch to 'Hi' position for high receiver volume and 'Nor' for normal receiver volume
- I. Speakerphone Volume Control**
- Slide the [VOLUME] switch to adjust speakerphone volume from max (maximum) volume to min (minimum) volume.

RECEIVING CALLER ID INFORMATION

Note: You must make sure your Telephone Company offer caller ID service so that the caller ID function can be activated.

A. Incoming Call Display

When there is an incoming call, the LCD will display the number, area code, name, time and date of the call.

B. Please note the following indicator:

"OUT OF AREA"

The call is made through a telephone company, which does not offer Caller ID service or does not transfer calls by long distance net "PRIVATE"

Some areas allow the option for callers to prevent the telephone data from being displayed on others' telephone. If you received such a call, "PRIVATE" will be shown on LCD

"Message Icon"

If you apply message service to your telephone company, LCD will display Message icon of post box when there is a message left.

When you read this message, the message icon will disappear.

REVIEWING THE CALLER ID LIST

Press [▲] or [▼] to review the incoming calls (at most 88 calls)

ERASING DATA FROM THE CALLER ID LIST

- Press [▲] or [▼] to select the wanted number, press [DEL] and the LCD will display "DEL CALL?", then press [DEL] again to confirm
- If press [DEL] continuously more than two seconds, the LCD will display "DEL ALL CALLS?", press [DEL] once more and the entire Caller ID list will be erased.

CALLING BACK A NUMBER FROM THE CALLER ID LIST

- Under on-hook state, press [▲] or [▼] to select the wanted number
- If the wanted number is 10 or 11 digits, press [DIAL] once, the LCD will display "PICK UP OR ADJ"
- If the wanted number is not 10 or 11 digits, press [DIAL] once and the LCD will display "PICK UP HANDSET"
- Pick up the handset and the displayed number will be dialed out automatically
- Or keep pressing [DIAL] continuously to dial out the displayed number with adding area code or SSN (if the original number without area code / SSN)
- Under off-hook state, press [▲] or [▼] to select the wanted number
- If the wanted number is 10 or 11 digits, press [DIAL] once, the LCD will display "WAIT OR ADJ" and the number will be dialed out automatically
- If the wanted number is not 10 or 11 digits, press [DIAL] once, the number will be dialed out automatically
- Or keep pressing [DIAL] continuously to dial the displayed number out with adding area code or SSN (if the original number without area code / SSN)

ONE-TOUCH MEMORY

- Under on-hook or off-hook state, press [STORE] button, the LCD will display "STORE NUMBER"
- Enter the wanted number and press [STORE] again, then the LCD will display "STORE TO."
- Press the one-touch memory key among M1-M3
- When you want to dial out a number from one-touch memory key, just press the key (among M1-M3) that the wanted number was stored in.

TWO-TOUCH MEMORY

- Under on-hook or off-hook state, press [STORE] button, the LCD will display "STORE NUMBER"
- Enter the wanted number and press [STORE] again, then the LCD will display "STORE TO."
- Press the two-touch memory key among 0-9

- When you want to dial out a number from two-touch memory key, just press [AUTO], then press the two-touch memory key (among 0-9) that the wanted number has been stored in.

MUSIC ON HOLD FUNCTION

- During conversation, press [HOLD] key once to enter music on hold state
- Put back the handset or press speakerphone button if speakerphone activated
- Lift the handset to continue the conversation or press speakerphone button to go to talk with the caller
- Or press [HOLD] again to end up the conversation

LAST NUMBER REDIAL


The last outgoing number can be redialed automatically just by pressing the [REDIAL] key under on-hook state. This is useful especially if the line is busy.

FLASH FUNCTION

- When in an office equipped with PABX, this telephone makes it easy to transfer calls
- Ask caller to wait and press [FLASH] key once
- Dial the extension number which caller intended
- When the party answers, just hang up the handset
- When the line is busy or nobody answers, press [FLASH] key again to re-connect with the caller

IMPORTANT NOTES:

To operate this unit, you must have "CALLER ID SERVICE" setup with your local telephone company. Some functions such as "CALLER NAME INDICATION" will only operate if such services are included in the user's Caller I.D. program with the local telephone company.

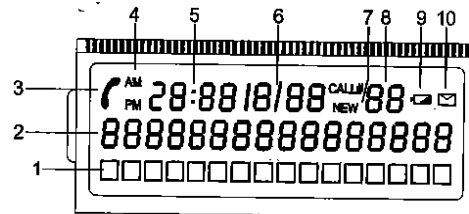

- | | |
|----------------------|--------------------------|
| 1. Name | 6. Month / Date |
| 2. Telephone Number | 7. New Call |
| 3. On call Indicator | 8. Number of calls |
| 4. AM/PM | 9. Low Battery Indicator |
| 5. Clock | 10. Message |

IMPORTANT SAFETY INSTRUCTIONS

When you use this telephone, follow these safety precautions to reduce the risk of fire, electric shock and injury.

- Read and understand all instructions
- Unplug the phone from the wall jack before cleaning with a damp cloth
- Do not use liquid or aerosol cleanser. Do not use this phone near water for example, near a bath tub, sink, or pool
- To reduce the risk of electric shock, do not push objects through the phone's slot or disassemble the phone. Pushing objects into the phone or opening or removing covers might expose you to dangerous voltages or other risk. Take it to a serviceperson when service or repair is required. Incorrect reassemble can cause electric shock when you use the telephone
- Do not place the phone on a bed, rug, and any similar surface or near a heater. The phone has slots and openings for ventilation that must not be blocked or covered.
- Do not place this phone on an unstable cart, stand or table. The phone might fall and be seriously damaged
- Unplug the phone from the phone line jack and refer service to serviceperson under the following conditions:
 - a) If the phone is exposed to rain or water
 - b) If the phone fails to operate normally
 - c) If the phone is dropped or the cabinet is damaged
 - d) If the phone exhibits a distinct change in performance
- Avoid using the phone during electrical storms. There is a risk of electric shock from lightning
- Do not use the phone to report a gas leak in the vicinity of the leak
- Follow all safety rules and use with caution when installing or modifying telephone lines. For example:
 - a) Do not install telephone wire during a lightning storm
 - b) Only install telephone jacks in dry locations unless the jack is specifically designed for wet locations
 - c) Avoid touching uninsulated telephone wires or terminals unless the telephone line is disconnected at the network interface

SAVE THESE INSTRUCTIONS